



Rysunek 1. Rozkład temperatury w charakterystycznych punktach obudowy FIREBOX EI60 - 75 mm RCF-BD-1430.

Tabela 1. Rozkład temperatury na powierzchni wewnętrznej obudowy FIREBOX EI60.

Czas,h	t, °C
0	20
1	20
2	20
3	20
4	20
4.999	20
6	20
7	20
8	20
9	20
10	20
10.999	20
11.999	20
12.999	20
14	20
14.999	20
15.999	20
16.998	20
17.999	20.01
18.999	20.02
20	20.03
20.999	20.04
21.998	20.06
22.998	20.09
24	20.12
24.999	20.17
25.999	20.23
26.999	20.3
27.999	20.39
28.998	20.49
29.998	20.62
30.998	20.76
31.997	20.94
32.998	21.13
33.996	21.36
34.998	21.62
35.998	21.91
36.998	22.23
37.997	22.59
38.997	22.99
39.997	23.43
40.997	23.91
41.998	24.44
42.996	25.01
43.999	25.64
44.996	26.31
45.996	27.03

46.998	27.8
47.996	28.63
48.999	29.51
49.997	30.45
50.999	31.45
51.999	32.5
52.995	33.6
53.999	34.78
54.999	36.01
56	37.3
56.994	38.65
57.994	40.06
58.999	41.54
59.996	43.08
60.002	43.09
